# 4 Zone Dimiming and CCT RF Remote Controller

# Model No.: RA1, RA2

4 zone/16 key/Wireless remote 30m distance/AAA x 2 battery





4 zone dimming

4 zone CCT

C€ RoHS @mc LVD RED

### Features

- Apply to single color or dual color LED controller.
- Each remote can match one or more receiver.
- AAAx2 battery powered.
- Operate with LED indicator light.

## Technical Parameters

Input and Output	
Output signal	RF(2.4GHz)
Working voltage	3VDC(AAAx2)
Working current	<5mA
Standby current	< 2µA
Standby time	2 year
Remote distance	30m(Barrier-free space)

Warranty	
Warranty	5 years

Safety and EMC	
EMC standard (EMC)	ETSI EN 301 489-1 V2.2.3 ETSI EN 301 489-17 V3.2.4
Safety standard(LVD)	EN 62368-1:2020+A11:2020
Radio Equipment(RED)	ETSI EN 300 328 V2.2.2
Certification	CE,EMC,LVD,RED

Environment	
Operation temperature	Ta:-30°C ~ +55°C
IP rating	IP20

## Mechanical Structures and Installations



# Key function

• RA1 4 zone dimming remote



### All on/off:

Turn on/off all 4 zone light.

## Zone 1/2/3/4 on/off:

Turn on/off zone light, at the same time, select current zone.

Short press multiple zone on key fastly, will select multiple zone synchronously.

#### Brightness+/-:

Adjust current selected zone brightness.

Short press 10 levels, long press 1-6s for continuous 256 levels adjustment.

#### Scene 1/2/3:

Short press recall the scene, long press 2s save current state into S1/2/3.

the LED indicator will light up longer when save OK.

4 zone recall or save synchronously.

User Manual Ver 1.0.7

### • RA2 4 zone CCT remote



#### All on/off:

Turn on/off all 4 zone light.

#### Zone 1/2/3/4 on/off:

Turn on/off zone light, at the same time, select current zone.

Short press multiple zone on key fastly, will select multiple zone synchronously.

#### Brightness+/-:

Adjust current selected zone brightness.

Short press 10 levels, long press 1-6s for continuous 256 levels adjustment.

#### Color temperature+/-:

Adjust current selected zone color temperature.

Short press 11 levels, long press 1-6s for continuous 256 levels adjustment.



### Scene 1/2/3:

Short press recall the scene, long press 2s save current state into \$1/2/3.

the LED indicator will light up longer when save OK.

4 zone recall or save synchronously.

## Match Remote Control (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

## Use the controller's Match key

#### Match:

Short press match key, immediately press zone on key on the remote.

The LED indicator fast flash a few times

#### Delete.

Press and hold match key for 5s to delete all match, The LED indicator fast flash a few times means all matched remotes were deleted.

#### Use Power Restart

#### Match:

Switch off the power, then switch on power, repeat again. Immediately short press zone on key 3 times on the remote. The light blinks 3 times means match is successful.

#### Delete.

Switch off the power, then switch on power, repeat again. Immediately short press zone on key 5 times on the remote. The light blinks 5 times means all matched remotes were deleted.

# Safety information

- 1. Read all instructions carefully before you begin this installation.
- 2. When installing battery, pay attention to the battery positive and negative polarity.

A long time without the remote control, remove the battery.

When remote distance becomes smaller and insensitive, replace the battery.

- 3. If no response from the receiver, please re-match the remote.
- 4. Gently handle remote, beware of falling.
- 5. For indoor and dry location use only.

User Manual Ver 1.0.7