S1-B + R11

RF Triac Dimmer Kit

- RF + Push AC phase-cut dimmer, 1 channel output.
- To dim and switch single color dimmable LED lamps,
- traditional incandescent and halogen lights.
- Touch the remote control slider to adjust the brightness. • Leading edge dimming or trailing edge dimming set by dip switch.
- Min brightness can be set by key.
- Light on/off fade time 3s selectable.
- Connect with external push switch to achieve on/off and dimming function.
- Easy to be inserted into standard 86*86mm wall box.

AC100-240V

AC100-240V

Max 1.5A

150-360W

256 levels

0-100%

RF 2.4GHz + Push Dim

Technical Parameters

Input voltage

Output voltage

Output current

Output power

Dimming signal

Dimming level

Dimming range

Triac Dimmer's Input and Output

•)))	Image: Control of the state of the
· ·	Prod=150-360W Mind Range-207C-+857C RoHS L N L N L N 4-6em
	00000

FC CE RoHS

out and Output		Safety and EMC	Safety and EMC		
	RF 2.4GHz	EMC standard	EN IEC 55015/EN IEC 61547		
;	3VDC(CR2032)		ETSI EN 301 489-1/-3		
	<5mA	Safety standard	EN 61347-1/-2 EN 62493		
	<10µA	Radio Equipment	etsi en 300 440		
	l years	Certification	CE RoHS FCC		
	30m(Barrier-free space)	Environment			
		Operation temperature	Ta: -20 °C ~ +55 °C		
		Recommended Num	ber of Load Connection		

Compatible Load Types

Load type	Maximum load	Remarks
Dimmable LED lamps	200VV @ 220V 100VV @ 110V	Due to variety of LED lamp designs, maximum number of LED lamps is further dependent on power factor result when connected to dimmer.
Triac dimmable LED drivers	200W @ 220V 100W @ 110V	Maximum permitted number of drivers is 200W divided by driver rated input power rating, and make sure the surge current is no more than 2 times 65A.
Incandescent lighting, HV halogen lamps	400VV @ 220V 200VV @ 110V	

RF Remote's Inp

Working voltage

Working current

Standby current

Standby time Remote distance

Output signal

Load type	Output power per load	Quantity
Dimmable downlight	5.5VV @ 220V~240V	20

Dimmable downlight	5.5VV @ 220V~240V	20
Triac dimmable LED driver	12VV @ 200V~240V	15
Triac dimmable LED driver	36VV @ 200V~240V	4
Triac dimmable LED driver	75W @ 200V~240V	2

Because different manufacturers triac dimmable LED driver rated input power is different,

you can refer to the formula to calculate the max. number of LED driver. Formula: D max = 200W/RP,

at the same time need to meet the sum of the surge current (I surge) does not exceed 130A.

 
For example: triac dimmable LED driver rated input power(RP) = 15.4W, surge current = 10A/230VAC,

Then D max= 200/15.4 = 13(pcs), I surge=13*10 = 130A, the max. number of triac dimmable LED driver is 13.

Mechanical Structures and Installations AC Push switch Match / Min brightness set key 52.00 mm 26.00 mm Typical Wall Junction Box Mounting DIP switch for Leading edge 00000 00000 or trailing edge phase-cut select A2 A1 A2 A1 A2 A1 Match Minaet 100-240 6 5 With C 12 5 AC N output 52.00 mm AC L output INPUT 00000 AC L input 00000 AC N input **Remote Function** 11.00 mm -36.00 mm-LED indicator On/Off ()틯 100% Bright touch slide 139.00 mm шШ E 40.00 50% 50 53. a CR2032 Battery Ð 1% 禹 Back holder with magnet

Note

To fix the remote, three options are offered for selection: Option 1. Can be adsorbed directly onto metal surfaces Option 2. Fix the remote' back holder on the wall with two screws. Option 3. Adhere the remote' back holder to the wall with paster.




Before the first use, please remove the protective film on the battery.
 If the LED indicator is not on when press key, it is due to dead battery

or bad contact caused by multiple plugging, please replace the battery, or raise the battery shrapnel with a screw driver.



Friac

Wiring Diagram

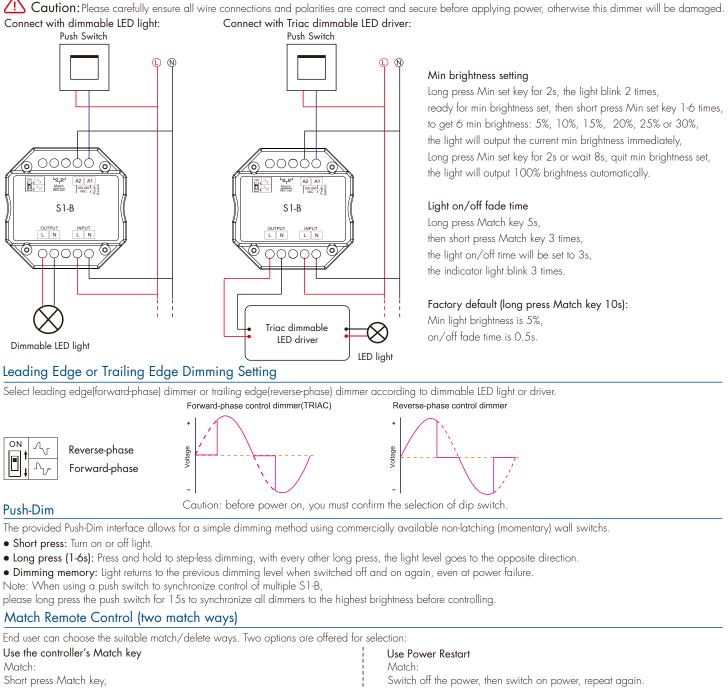

immediately press on/off key of the remote.

Immediately short press on/off key 3 times on the remote. The light blinks 3 times means match is successful. Deleter Switch off the power, then switch on power, repeat again.

Immediately short press on/off key 5 times on the remote. The light blinks 5 times means all matched remotes were deleted.

Safety Information

The light blinks 5 times means all matched remotes were deleted.

Press and hold Match key for 5s to delete all match,

- Read all instructions carefully before you begin this installation.
 When installing battery, pay attention to the battery positive and negative polarity. A long time without the remote control, remove the battery. When remote distance becomes smaller and insensitive, replace the battery.
 Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children.
- Do not dispose of batteries in household trash or incinerate.
- Do not force discharge, recharge, disassemble, or heat the battery. Stop using the product if the battery compartment is not securely closed. If swallowing occurs seek medical attention immediately. Gently handle remote, beware of falling. Δ
- 6.
- 8. For indoor and dry location use only.

FCC ID Statement:

Mobile

Delete:

- **RF** Exposure Information
- This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.
- This equipment should be installed and operated with minimum distance 20cm between the radiator and your body. IC ID Statement:

Mobile

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. Cet équipement doit être installé et utilisé à une distance minimale de 20 cm entre le radiateur et votre corps