# DMX512

# Wall Mounted Touch Panel

- Touch panel 4 zone RGB+CCT DMX512 master, can also be used as 4 zone RGB+CCT RF remote.
- DMX signal output, comply to standard DMX512 protocol, compatible with DMX decoder from any supplier.
- $\bullet$  When used as RF remote, each zone can remote control multiple RF 2.4G LED controllers.
- Ultra sensitive high strength glass touch panel with touch color wheel in the middle.
- Smooth and accurate color adjustment by touching the color wheel.
- Touch keys with LED indicator.
- White & Black glass panel available.





# CE RoHS emc LVD






### **Technical Parameters**


Input and Output			
Input voltage	100-240VAC		
Input current	Max 0.1A		
Output signal	DMX512, RF 2.4GHz		
Environment			
Operation temperature	Ta: -30°C ~ +55°C		
Case temperature (Max.)	Tc: +65°C		
IP rating	IP20		

Dimming data		
Input signal	Touch key + RF 2.4GHz	
RF Control distance	10m(Barrier-free space)	
Dimming level	256 levels	
Dimming range	0-100%	
Package		
Size	L112 x W112 x H50mm	
Gross weight	0.234kg	

Safety and EMC		
EMC standard (EMC)	ETSI EN 301 489-1 V2.2.3	
	ETSI EN 301 489-17 V3.2.4	
Safety standard	EN 62368-1:2020+A11:2020	
Radio Equipment(RED)	ETSI EN 300 328 V2.2.2	
Certification	CE,EMC,RED	
Warranty		
Warranty	5 years	

#### Mechanical Structures and Installations

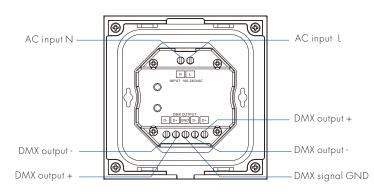

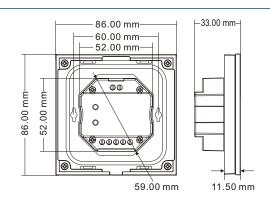

Typical base as below:




European style




86 size

Installation diagram:

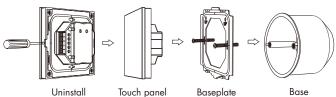


# Wiring Diagram

• Touch panel work as DMX512 master

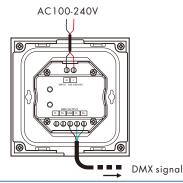

• Touch panel work as RF remote

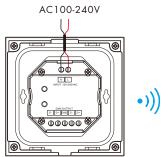

### Key function



Turn on key tone: Long press power key for 5s when all zone light is off, will turn on or turn off key tone.

#### Scene locking:

- Scene keys can be set to locked state, cancel long press for 5 seconds to save the scene function (default scene is not locked).
- Short press the panel on/off key, turn on the light first, then turn off the light, immediately long press the panel on/off key for 5 seconds, then immediately long press any one scene key for 5 seconds to set all scene keys to locked state.

4 zone control seperately or synchronously, each zone could control multiple receivers.

• Short press the panel on/off key, turn on the light first, then turn off the light, immediately long press the panel on/off key for 5 seconds, then immediately long press any one scene key for 10 seconds to restore all scene keys to unlocked state.

#### Touch Panel work as DMX512 Master

After connect with DMX decoders, please set the DMX decoders address as below:

DMX address	Light color channel		
	R G B WW CW		
Zone 1 DMX decoder's address	1 2 3 4 5		
Zone 2 DMX decoder's address	6 7 8 9 10		
Zone 3 DMX decoder's address	11 12 13 14 15		
Zone 4 DMX decoder's address	16 17 18 19 20		

## Touch Panel work as RF remote

Touch panel 4 zone remote can match with RGB+CCT (or single color, dual color, RGB) light type RF controller. End user can choose the suitable match/delete ways. Two options are offered for selection:

#### Use the controller's Match key

Match:

Short press match key, immediately press zone key of the touch panel. The LED indicator fast flash a few times means match is successful.

#### Delete:

Press and hold match key for 5s to delete all match, The LED indicator fast flash a few times means all matched remotes were deleted.

### Use Power Restart

Match:

Switch off the power of the receiver, then switch on power, repeat again. Immediately short press zone key 3 times on the touch panel. The light blinks 3 times means match is successful.

Delete:

Switch off the power of the receiver, then switch on power, repeat again. Immediately short press zone key 5 times on the touch panel. The light blinks 5 times means all matched remotes were deleted.

#### Dynamic mode list

No.	Name	No.	Name
1	RGB jump	6	RGB fade in and out
2	RGB smooth	7	Red fade in and out
3	6 color jump	8	Green fade in and out
4	6 color smooth	9	Blue fade in and out
5	Color temperature smooth	10	White fade in and out