



Single Color LED Controller

- 4096 levels 0-100% dimming smoothly without any flash.
- Match with RF 2.4G single zone or multiple zone dimming remote control.
- One RF controller accept up to 10 remote control.
- Auto-transmitting function: Controller automatically transmit signal to another controller with 30m control distance.
- Synchronize on multiple number of controllers.
- Connect with external push switch to achieve on/off and 0-100% dimming function.
- Light on/off fade time 3s selectable.
- Over-heat / Over-load / Short circuit protection, recover automatically.






1 Channel / Step-less dimming / Wireless remote control / Auto-transmitting / Synchronize / Push Dim / Multiple protection

Technical Parameters

Input and Output		Dimming data		Safety and EMC	
Input voltage	5-36VDC	Input signal	RF 2.4GHz + Push Dim		EN IEC 55015/
Input current	8.5A	Control distance	30m(Barrier-free space)	EMC standard	EN IEC 61547 ETSI EN 301 489-1/-3
Output voltage	5-36VDC	Dimming gray scale	4096 (2^12) levels	Safety standard	EN 61347-1/-2
Output current	1CH,8A	Dimming range	0 -100%	Radio Equipment	ETSI EN 300 440
Output power	40W/96W/192W/288W	Dimming curve	Logarithmic	Certification	CE RED FCC
	(5V/12V/24V/36V)	PWM frequency	2000Hz (default)	Warranty and Protecti	on
Output type	Constant voltage	Environment		Warranty	5 years
Package		Operation temperature	Ta: -30 °C ~ +55 °C		Reverse polarity
Size	L114 x W38 x H26mm	Case temperature (Max.)	Tc: +85°C	Protection Over-load	
Gross weight	0.052kg	IP rating	IP20		Short circuit

Mechanical Structures and Installations

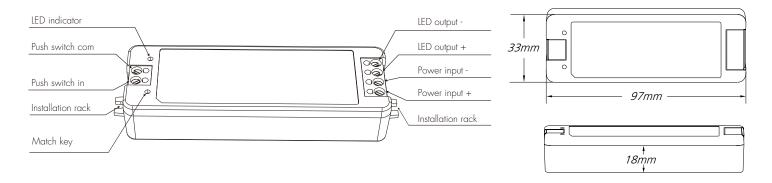

Match Remote Control (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

Use the controller's Match key

Match:

Short press match key, immediately press on/off key (single zone remote) or zone key (multiple zone remote) on the remote.

The LED indicator fast flash a few times means match is successful.

Delete

Press and hold match key for 5s to delete all match, the LED indicator fast flash a few times means all matched remotes were deleted.

Use Power Restart

Match:


Switch off the power of the receiver, then switch on power, repeat again.

Immediately short press on/off key (single zone remote) or zone key (multiple zone remote) 3 times on the remote. The light blinks 3 times means match is successful.

Delete

Switch off the power of the receiver, then switch on power, repeat again.

Immediately short press on/off key (single zone remote) or zone key (multiple zone remote) 5 times on the remote. The light blinks 5 times means all matched remotes were deleted.

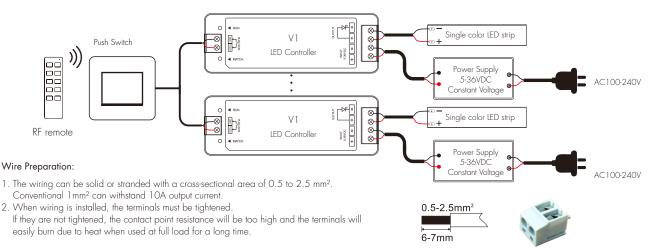

Note: The output power of a constant voltage power supply should be at least 1.2 times that of the output load (light strip), otherwise the full power output of the load can easily cause automatic flickering or shaking of the light.

Push Dim Function


The provided Push-Dim interface allows for a simple dimming method using commercially available non-latching (momentary) wall switchs.

- Short press: Turn on or off light.
- Long press (1-6s): Press and hold to step-less dimming, With every other long press, the light level goes to the opposite direction.
- Dimming memory: Light returns to the previous dimming level when switched off and on again, even at power failure.
- Synchronization: If more than one controller are connected to the same push switch, do a long press for more than 10s, then the system is synchronized and all lights in the group dim up to 100%. This means there is no need for any additional synchrony wire in larger installations.

 We recommend the number of controllers connected to a push switch does not exceed 25 pieces,

 The maximum length of the wires from push to controller should be no more than 20 meters.

Dimming Curve

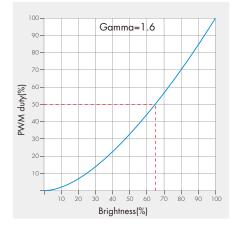

Light on/off fade time

long press match key 5s, then short press match key 3times, the light on/off time will be set to 3s, the indicator light blink 3times.

Long press match key 10s, restore factory default parameter, the light on/off time also restore to 0.5s.

Malfunctions Analysis & Troubleshooting

Malfunctions	Causes	Troubleshooting
No light	No power. Wrong connection or insecure.	Check the power. Check the connection.
Uneven intensity between front and rear,with voltage drop	Output cable is too long. Wire diameter is too small. Overload beyond power supply capability. Overload beyond controller capability.	Reduce cable or loop supply. Change wider wire. Replace higher power supply. Add power repeater.
No response from the remote	The battery has no power. Beyond controllable distance. The controller did not match the remote.	Replace battery. Reduce remote distance. Rematch the remote.

Installation Precautions

- 1. The products shall not be stacked, the distance should be \geq 20cm, so as not to affect lifespan of the products due to poor heat dissipation.
- 2. The product shall not be installed close to the switching power supply with an interval of \geq 20cm to avoid radiation interference of the switching power supply.
- 3. The installation height shall be ≥ 1 m from the floor to avoid shortening the remote control distance due to too weak reception signal.
- 4. The products are not allowed to be close to or covered by metal objects, with an interval of ≥ 20cm to avoid signal attenuation and shorten the remote distance.
- 5. Avoid installation at the corner of the wall or the corner of the beam, with an interval of \geq 20cm to avoid signal interference.

Statement

FCC ID Statement:

Mobile

RF Exposure Information

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.