

Model No.: TK01

# RGB + Color Temperature

6W/Wireless remote control/AC input/50000h lifespan/E27

C€ RoHS emc LVD RED

















**6**w



Auto-transmitting
Auto-synchronization

50000h Lifespan

2.4G RF

Group Control with many zones, and endless LED bulbs in each zone

510 LUMENS

#### **Feature**

- Match with Skydance's 2.4G RGB+CCT remote control, One bulb accept up to 10 remote control.
- Match with WiFi-relay device for smart phone control.
- 16 million colors and 10 dynamic mode, adjustable color temperature and saturation.
- Auto-transmitting function: bulb automaticly transmit signal to another bulb with 30m control distance.
- Synchronize on multiple number of bulbs.
- Use SAMSUNG LED.
- 50,000 hours lifespan.

### Technical parameter

Model Power Voltage	TK01 6W AC86V-265V 50/60Hz	LED QTY	SAMSUNG 10pcs WW 2835 0.5W SAMSUNG 10pcs CW 2835 0.5W SANAN 4pcs RGB 5050 1.5W
Color Temperature	2700-6500K	Lifespan(h)	50000h
Ra/CRI	>80	Beam Angle	220°
PF(cos)	>0.5	Material	Aluminum + PC cover
Luminous Efficiency	85LM/W	Base	E27/E26/B22
Luminous Flux(lm)	510LM	Dimensions	Ø57*H100mm

Dimming data			
Input signal	RF 2.4GHz		
Control distance	30m		
Dimming level	4096 levels		
Dimming range	0 - 1 00%		

Safety and EMC			
EMC standard (EMC)	EN301 489,EN 62479		
Safety standard(LVD)	EN60950		
Radio Equipment(RED)	EN300 328		
Certification	CE,EMC,LVD,RED		


Environment			
Operation temperature	Ta:-30 °C ~ +55 °C		
Case temperature (Max.)	Tc:+85°C		
IP rating	IP44		

Warranty	
Warranty	3 years

# Safety guide

- 1. Make sure the voltage is between AC86-265V.
- 2. When install the light, please switch off the power to make sure safty.
- 3. The working power is high voltage alternating current, so it must be far away from people and must with ground connection.
- 4. Avoid using under high temperature or moisture.

#### Dimension

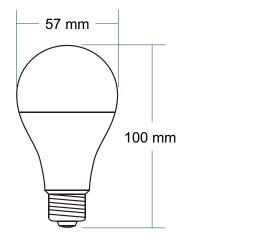



# Controlled by wireless 2.4GHz remote control

#### Handhold remote



#### Wall mounted remote



#### Match method:

Switch off the power of the bulb, then switch on power again, immediately short press on/off key (single zone remote) or zone key(multiple zone remote) 3 times on the remote. The light blinks 3 times means match is successful.

#### Delete match:

Switch off the power of the bulb, then switch on power again, immediately short press on/off key(single zone remote) or zone key(multiple zone remote) 5 times on the remote. The light blinks 5 times means delete all matched remote.

#### When use multiple RGB+CCT lamps, two application method:

1. All the lamps in the same zone.

Auto-transmitting: One lamp can transmit the signals from the remote to another lamp within 30m, as long as there is a lamp within 30m, the remote control distance can be limitless.

Auto-synchronization: Multiple lamps within 30m distance can work synchronously when they are controlled by the same remote, under same dynamic mode and with same speed.

Lamp placement may offer up to 30m communication distance. However, we recommend for indoor applications that lamp placements should be no further apart than 15m.

2. Each lamp(one or more) in a different zone, like zone 1, 2, 3 or 4.

# Controlled by smart phone APP



Enter android market / App Store, Search SkySmart application software, download and install.

# Dynamic mode list

No.	Name	No.	Name
1	1 RGB jump		RGB fade in and out
2	2 RGB smooth		Red fade in and out
3	6 color jump	8	Green fade in and out
4 6 color smooth		9	Blue fade in and out
5	Color temperature smooth	10	White fade in and out

# Troubleshooting

- 1. The bulb does not respond to the RF remote.
  - Check if the power is switched on at the wall.
  - Check if the battery levels of the RF remote are normal, or replace battery.
- 2. The bulb changes unexpectedly by itself.

Possible reason: The bulb may be controlled by another RF remote.

Solution: You can delete match firstly, then match again.