# Dual Color LED Controller Kit

## Model No.: V2 + RT2

2 channels constant voltage/Touch color slide/Stepless dimming/Wireless remote 30m distance



C€ RoHS @mc LVD RED

## **Features**

- Mini style controller with 3 channel constant voltage output
- Ultra sensitive color adjustment touch wheel
- Smooth dimming and switch without any flickering
- 4 scene memory
- Auto-transmitting function: Controller automaticly transmit signal to another controller with 30m control distance
- Synchronize on multiple number of controllers
- Light on/off fade time 3s selectable

## Technical Parameters

LED Receiver's Inpu	Receiver's Input and Output		
Input voltage	12-24VDC		
Input current	10.5A		
Output voltage	2x(12-24)VDC		
Output current	2CH,5A/CH		
Output power	2x(60-120)W		
Output type	Constant voltage		

Dimming data	
Dimming level	4096 levels
Dimming range	0-100%
Dimming curve	Linear
PVVM Frequency	2000Hz


Warranty and Prot	Warranty and Protection	
Warranty	5 years	
Protection	Reverse Polarity	


LED Remote's Input	.ED Remote's Input and Output		
Output signal	RF(2.4GHz)		
Working voltage	3VDC(AAAx2)		
Working current	<5mA		
Standby current	< 10µA		
Standby time	2 year		
Remote distance	30m		

Safety and EMC	
EMC standard (EMC)	ETSI EN 301 489-1 V2.2.3 ETSI EN 301 489-17 V3.2.4
Safety standard(LVD)	EN 62368-1:2020+A11:2020
Radio Equipment(RED)	ETSI EN 300 328 V2.2.2
Certification	CE,EMC,LVD,RED


Environment	
Operation temperature	Ta: -30°C ~ +55°C
Case temperature (Max.)	Tc: +85°C
IP rating	IP20

### Mechanical Structures and Installations



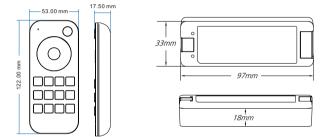

## Wiring Diagram

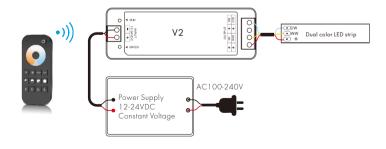

User Manual Ver 1.0.4

Key function V2+R7-1 Dual Color LED Controller Kit



: Turn on/off light.

: Touch to change color temperature.

\* Adjust brightness, short press 10 levels, long press 1-ós for continuous 256 levels adjustment.

www cw : Get warm white or cold white directly.

25%, 50%, 75%, 100% brightness.

S<sub>1</sub> S<sub>2</sub> S<sub>3</sub> S<sub>4</sub> : Short press recall the scene, long press 2s save current state into S1/2/3/4. the LED indicator display green when save OK.

## Match Remote Control (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

### Use the controller's Match key

#### Match:

Short press match key, immediately press on/off key of the remote.

#### Delete:

Press and hold match key for 5s to delete all match, The light blinks 5 times means all matched remotes were deleted.

#### Use Power Restart

#### Match:

Switch off the power, then switch on power, repeat again. Immediately short press on/off key 3 times on the remote. The light blinks 3 times means match is successful.

#### Delete:

Switch off the power, then switch on power, repeat again. Immediately short press on/off key 5 times on the remote. The light blinks 5 times means all matched remotes were deleted.

## Light on/off fade time

Long press match key 5s, then short press match key 3 times, the light on/off time will be set to 3s, the indicator light blink 3 times. Long press match key 10s, restore factory default parameter, the light on/off time also restore to 0.5s.

## Application notes

All the receivers are matched with one RF remote.









RF remote

Auto-transmitting: One receiver can transmit the signals from the remote to another receiver within 30m, as long as there is a receiver within 30m, the remote control distance can be extended.

Auto-synchronization: Multiple receivers within 30m distance can work synchronously when they are controlled by the same remote

Receiver placement may offer up to 30m communication distance. However, we recommend for indoor applications that receiver placements should be no further apart than 15m.

#### Dual color control


CH1=Warm white LED

CH2=Cool white LED


Each channel can supply up to 120W(@24V) and white balance can be controlled as such:

Color temperature	Cool white	Neutral white	Warm white
Power distribution	CH1=0W,CH2=120W	CH1=60W,CH2=60W	CH1=120W,CH2=0W

### Linear dual color tuning

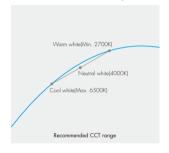

## Dimming curve

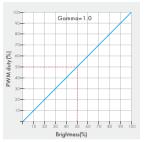

## Malfunctions Analysis & Troubleshooting

Malfunctions	Causes	Troubleshooting
No light	No power. Wrong connection or insecure.	Check the power. Check the connection.
Uneven intensity between front and rear, with voltage drop	ont and 2. Write diameter is too small. 2. Change wider w	
No response from the remote	The battery has no power. Beyond controllable distance. The controller did not match the remote.	Replace battery. Reduce remote distance. Rematch the remote.

User Manual Ver 1.0.4